


DustEZE™

3 In One HEPA Cleaner

**Duster
Chalk Eraser
Microfiber Mop**

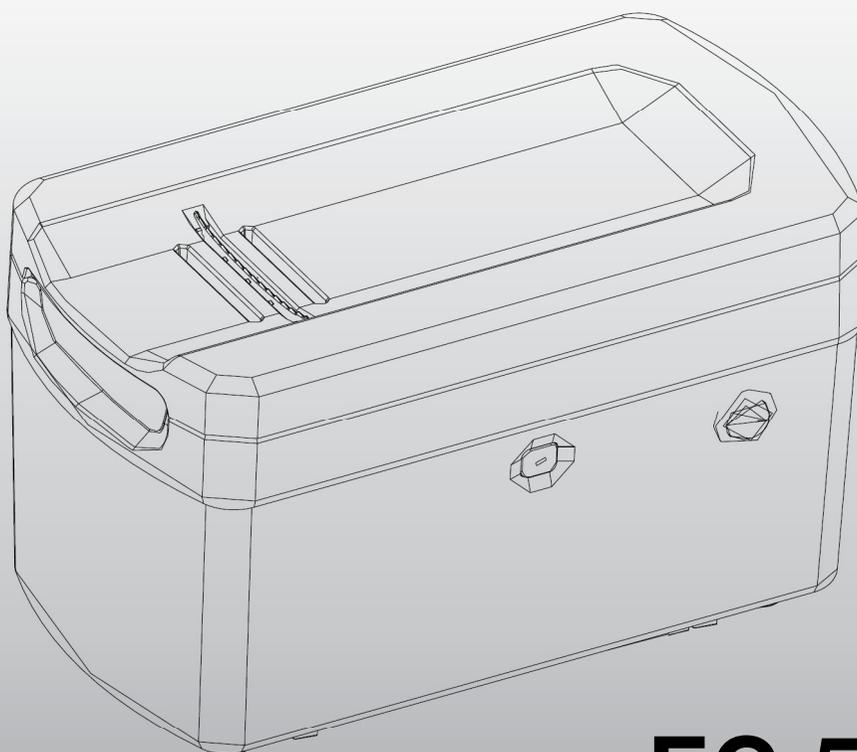


Model EC-560
(120V, 480W)

PLEASE READ THIS BOOKLET CAREFULLY BEFORE
OPERATES THIS APPLIANCE

1. FEATURES:


- (1) **High Efficiency Particulate Air (HEPA) filter:** set ahead the motor, can suck up the dust completely and keep the discharged air clean, also can prolong its life.
- (2) **Dust full indicator:** when the dust bag or HEPA filter are full of dust, the “dust full indicator” will turn to red.
- (3) **Dustproof cover:** This product is applied with exact hermetical also durable for cleanout structure. That make this appliance can keep clean inside and outside for a long time, also can keep dust from spreading effectively which will pollute those inner components. It also can reduce the time spend on maintenance and avoiding those spreading dust suck into motor for prolonging the life of motor.
- (4) **HEPA filter install failed protect function:** While the HEPA filter is not installed, it will do not work for protecting motor and keeping dust from leaking.
- (5) **Dustbag absent protect function:** If dustbag is absent or placed incorrectly, the top cover will can not be closed.
- (6) **Replaceable slice brush:** Cleaning the dust thoroughly, if it is wore away, which can be replaced by oneself easily.
- (7) **Overheat protect function:** Equip with “Reset thermostat protector” on the motor to prevent the motor from any breakage caused by overheat.
- (8) **Over loading of electric current protect function:** Apply with Non-fuse electric current switch can prevent the product from any damage caused by over loading of electric current. And it is no necessary to change fuse for instauration, but only press the reset button under the base.

2. DESCRIPTION OF PARTS:

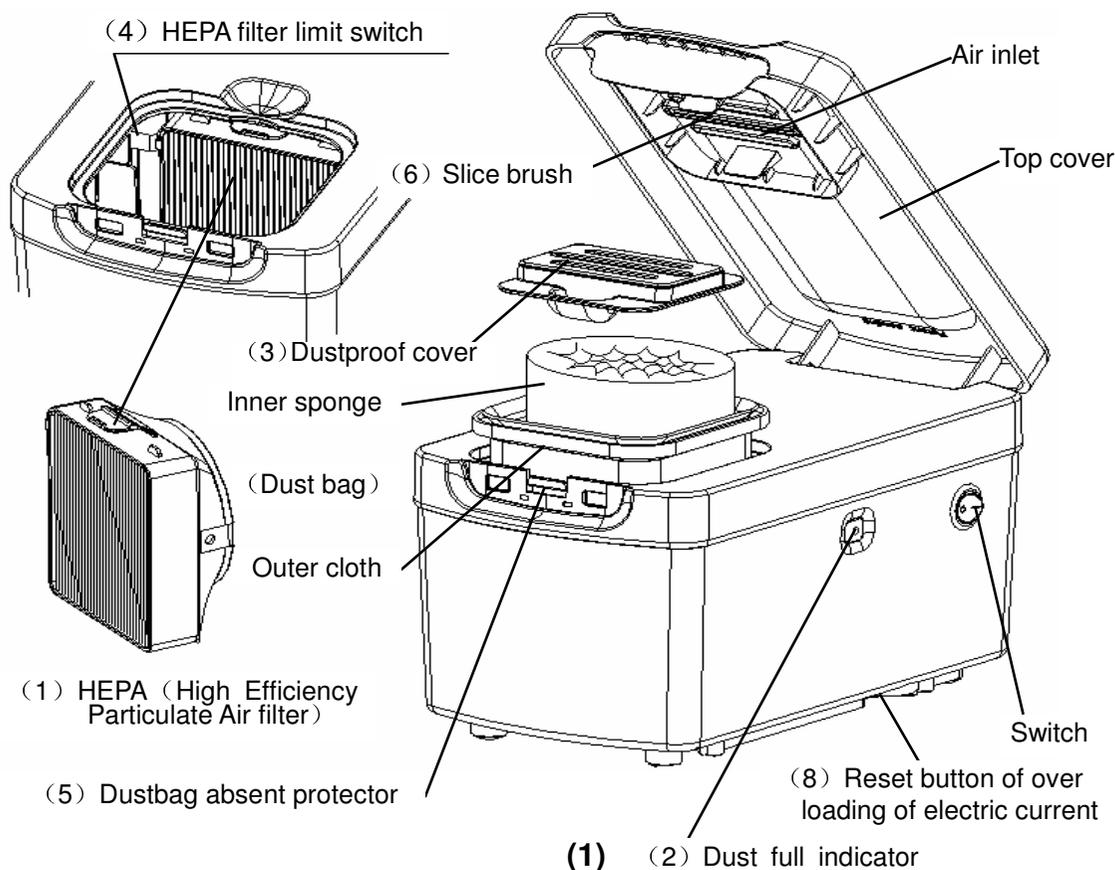


3. PRECAUTIONS:

- This appliance can not immerse or wash by water. Keep the appliance away from humidification place.

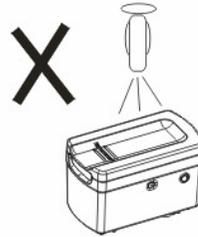

- This appliance can be operated from 0°C to 40°C. Do not place this appliance in the condition of lower.

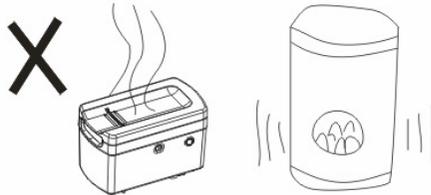


- Do not unplug the power outlet when your hand is wet.



- Keep this appliance away from those flammable or combustible objects.



- Without authorization, do not attempt to repair the appliance yourself.
- Be sure to switch off the power before clean this appliance.
- Be sure to keep the outlet grill unblocked; Air inlet also can not block for a long time.

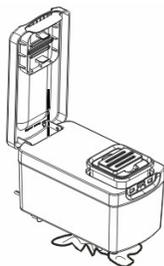

CAUTION: This product is intended for school , office or household use only, to clean the blackboard eraser or duster (microfiber mop) and must to be dry object; Do not use outdoors or clean any wet object.

IMPORTANT SAFETY INSTRUCTIONS (Read all instructions before using.)

When using this appliance, basic precaution should always be followed, including the following:

WARNING-To reduce the risk of fire, electric shock, or injury:

1. Do not leave appliance when plugged in. unplug from outlet when not in use and before servicing.
2. Do not use outdoors or on wet surfaces.
3. Do not allow to be used as a toy. Close attention in necessary when used by or near children.
4. Use only as described in this manual. Use only manufacturer's recommended attachments.
5. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
6. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surface.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle plug or appliance with wet hands.
9. Do not put any object into opening. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
10. Keep hair, loose clothing, finger, and all parts of body away from openings and moving part.
11. Turn off all controls before unplugging.
12. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
13. This appliance is provided with double insulation. Use only identical replacement parts.
See instructions for Servicing Of Double-Insulated Appliance.
14. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
15. Do not use without dust bag, Dustproof cover, and HEPA filters in place.

Servicing Of Double-Insulated Appliance

For a double-insulated, cord-connected appliance:

A double-insulated appliance is marked with one or more of the following: The words "DOUBLE INSULATION" or "DOUBLE INSULATED" or double insulation symbol (square within a square).



In a double-insulation appliance, two systems of insulation are provided instead of grounding.

No grounding means is provided on a double insulated appliance, nor should a means for grounding be added to the appliance. Service a double-insulated appliance require extreme care and knowledge of the system. and should be done only by qualified service personnel.

Replacement parts for a double-insulated appliance must be identical to the parts they replace

Specific instructions for the proper method of storage of the cord, the total appliance, and the like, when the appliance is not in use and for care of the cord while in use.

SAVE THESE INSTRUCTIONS


(3)

4. INSTRUCTION FOR OPERATING:

① Place this product on the desk



A Put the blackboard eraser on the surface of top cover and traverse it, dust can be cleaned easily

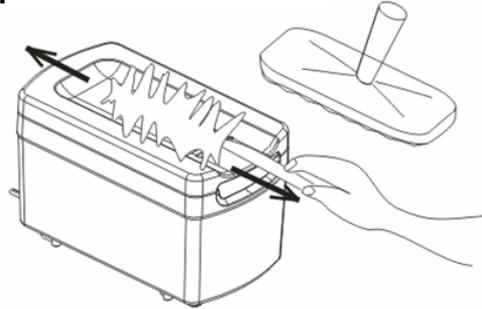

B Put the duster or Micro Fibers Mop on the surface of top cover and traverse it, dust can be cleaned easily

② Install of dustbag



Inner sponge should not leave outside



Dustproof cover need to place flatly, do not warp it




CAUTION: This product is intended for school , office or household use only, to clean the blackboard eraser or duster (microfiber mop) and must to be dry object; Do not use outdoors or clean any wet object.

5. INSTRUCTION FOR CLEANING

① Open the top cover



② Take out the filter

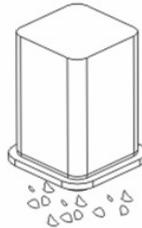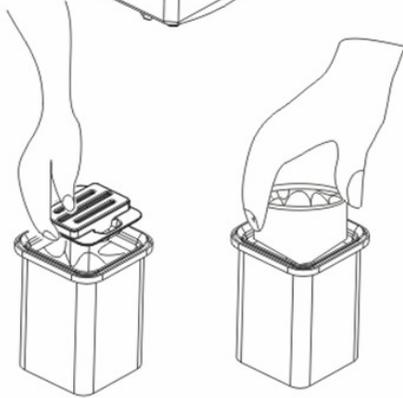
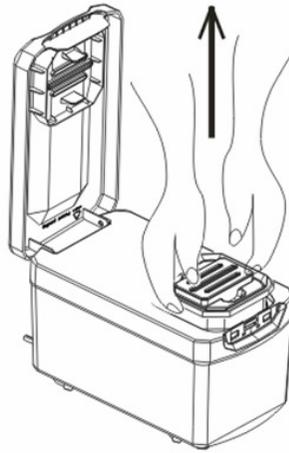


③ Remove the dustproof cover


⑥ Take out the HEPA filter to check if it was blocked

④ Take out the inner sponge dustbag

⑤ Empty the dust in the inner and outer dustbag

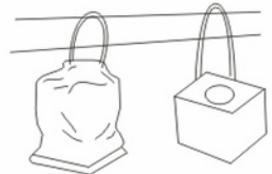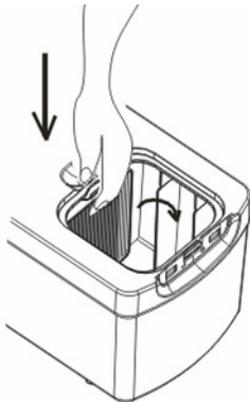

⑦ Clean
dustproof cover
inner sponge dustbag
outer cloth dustbag
HEPA filter (if it was blocked)

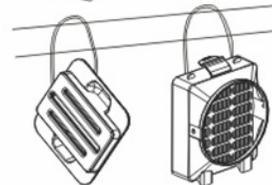

⑧ Dry the dustproof cover by airing, inner sponge dustbag, outer cloth dustbag and **HEPA** filter before using



⑨ According to step of ⑥ ④ ③ ② ① to install those clean parts and fold the top cover

(5)

6. TROUBLE SHOOTING GUIDE:

Please check the following details before you have the appliance repaired in an authorized servicing department:

Problem	Possible reason	Solution
Product can not work (out of power)	<ul style="list-style-type: none"> ● HEPA filter is absent or installed not correctly ● Over loading of electric current, power cut off automatic ● Motor overheat, power cut off automatic 	<ul style="list-style-type: none"> ● Check the HEPA filter and install Correctly ● Press the power reset button under the base ● Around a half hour later, the product can reactivate automatic
Dust full indicator turn to red	<ul style="list-style-type: none"> ● Dustbag full of dust ● HEPA filter blocked 	<ul style="list-style-type: none"> ● Empty the dustbag and clean out it by water if it is necessary ● Clean out the HEPA filter and dry it before using
Top cover can not fold	<ul style="list-style-type: none"> ● Dustbag (inner and outer) absent ● inner sponge dustbag absent or install incorrect ● The direction of dustproof cover is wrong 	<ul style="list-style-type: none"> ● Install the dustbag (inner and outer) ● Place the inner sponge dustbag into the inner cloth dustbag and be sure to do not leave outside ● Circumvolve dustproof cover 90° flatly

Note of Polarized Plug:

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

7. SPECIFICATION:

Rating Voltage / Frequency	AC120V,60HZ
Rating power	480W
Dimension	270mmX148mmX168mm(LXWXH)
Net weight	2.3Kg
Power cord	2m

8. WARRANTY: 1 YEAR WARRANTY

(Filters are not covered)

Model No	EC-560
Date of Purchase	
Retailers Name	